

# Fast operation of Analog Villa System

2017.8


## Content

<b>1.</b>	<b>System structure.....</b>	<b>1</b>
1.1	Overview .....	1
1.2	Demo environment .....	1
1.3	Firmware and software .....	2
<b>2.</b>	<b>How to configure: 1VTO+1VTH .....</b>	<b>3</b>
2.1	Check result.....	3
<b>3.</b>	<b>How to configure: 1VTO+2VTH .....</b>	<b>4</b>
3.1	Check result.....	4
<b>4.</b>	<b>How to setup DND function .....</b>	<b>4</b>
<b>5.</b>	<b>How to setup Alarm function .....</b>	<b>6</b>
5.1	System Connection.....	6
5.2	Arming/Disarming Strategy.....	6

## 1. System structure

This document lists the involved firmware and software, and explains the configuration of Analog Villa System, including the VTO, VTH.

### 1.1 Overview

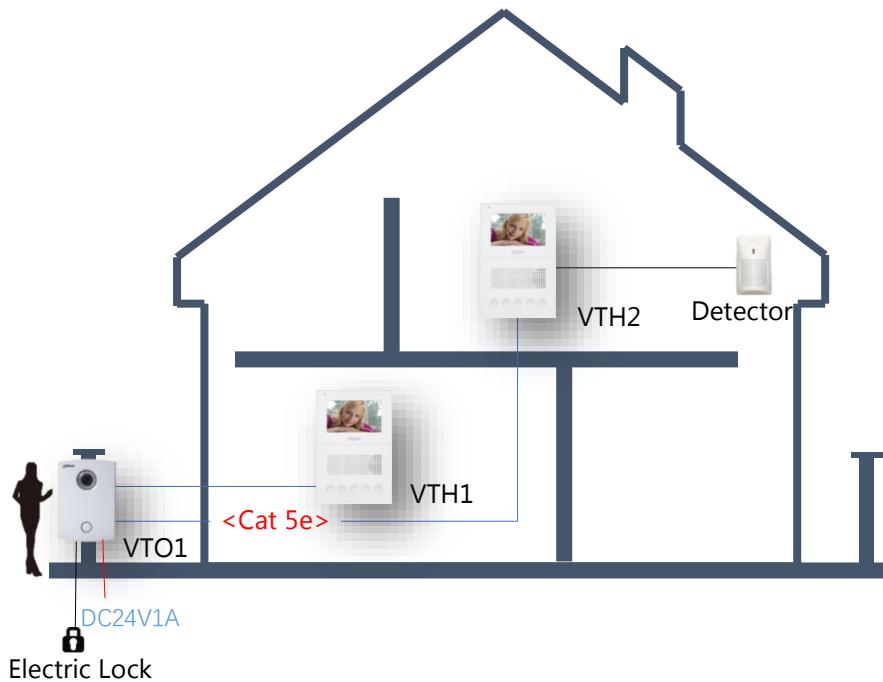

### 1.2 Demo environment



**1.3 Firmware and software**

VTO5000C	General_VTO5000 MCU_V3.120.0000.0.R.150612	
VTH1200DS	General_VTH1X0XX MCU_V5.510.0000.0.R.160322	
VTH1200DS	General_VTH1X0XX MCU_V5.510.0000.0.R.160322	

**Note:** Refer to 'Analog Apartment system' about the way to check the software of analog devices.

## 2. How to configure: 1VTO+1VTH


Step 1 Connect the VTO to power.

Step 2 Connect VTH and VTO with cable.


**Note:** Analog VTH need to be powered by VTO or distributor.



### 2.1 Check result

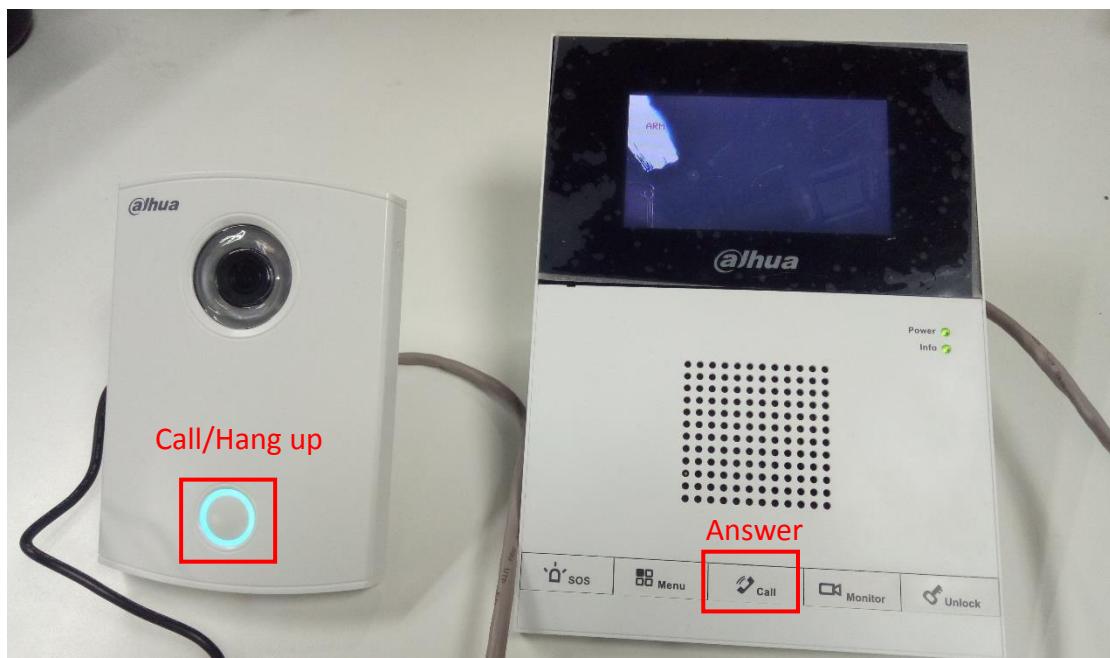


### 3. How to configure: 1VTO+2VTH

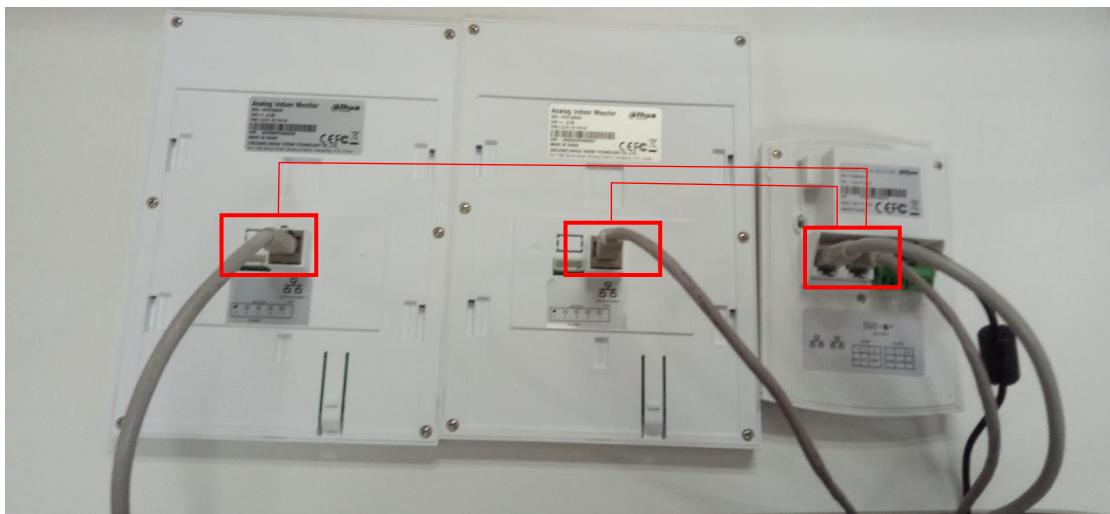

Connect VTO and VTH1 through Port1. The same to add VTH2 through Port2.


#### 3.1 Check result

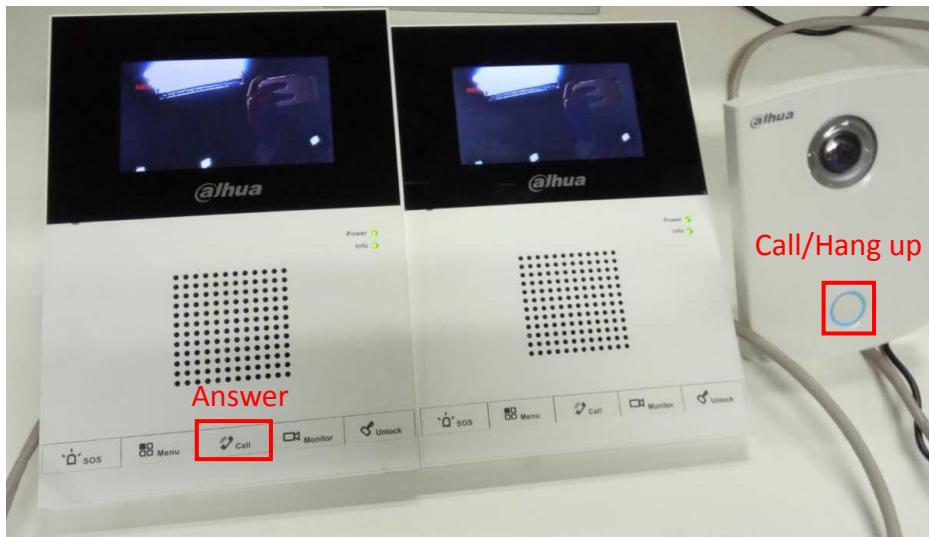

Note: If one of VTHs answer the call, the other will shut down.

### 4. How to setup DND function

Under standby status, you can turn on DND function by long pressing **call button** for 5s.

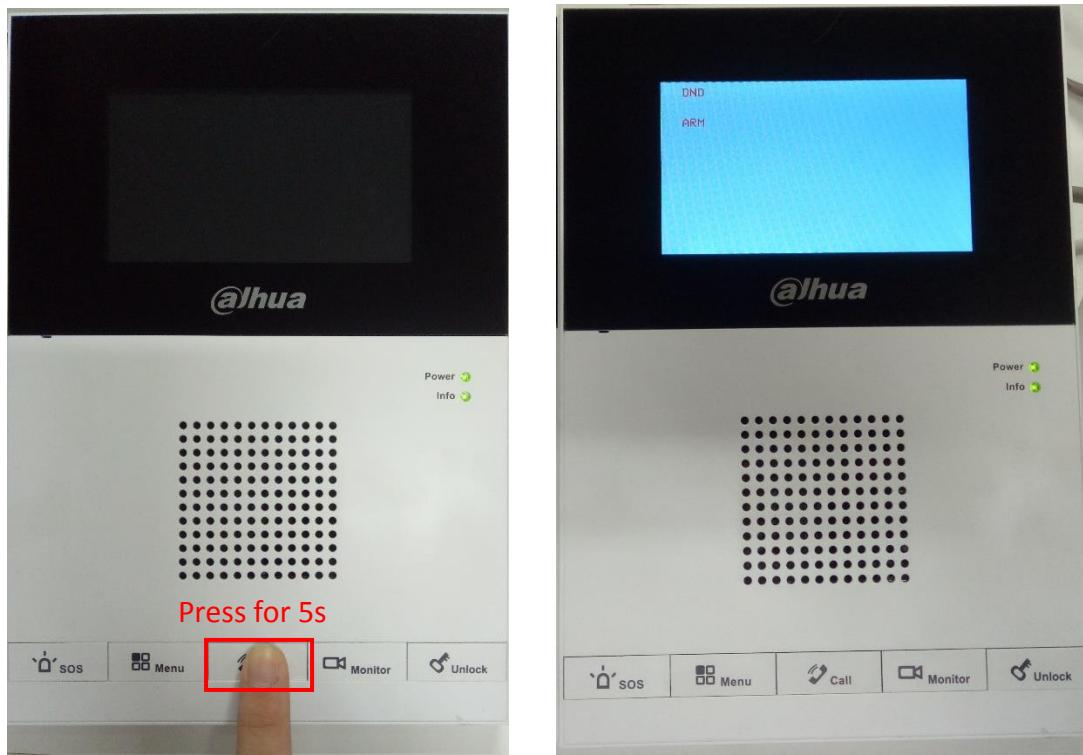

Now you are under DND, when door station calls, you may use the function without incoming ring. You can connect and start to talk by pressing call button.

**Note:** For program of some versions, under DND status, message will directly inform you that VTH is busy.


The default DND is 8 hours, and after 8 hours, it will be automatically cancelled. To manually turn off DND: under standby status, long press call button for 5s to turn it off.



## 5. How to setup Alarm function

### 5.1 System Connection

Install electric lock, unlock button or door sensor as below:

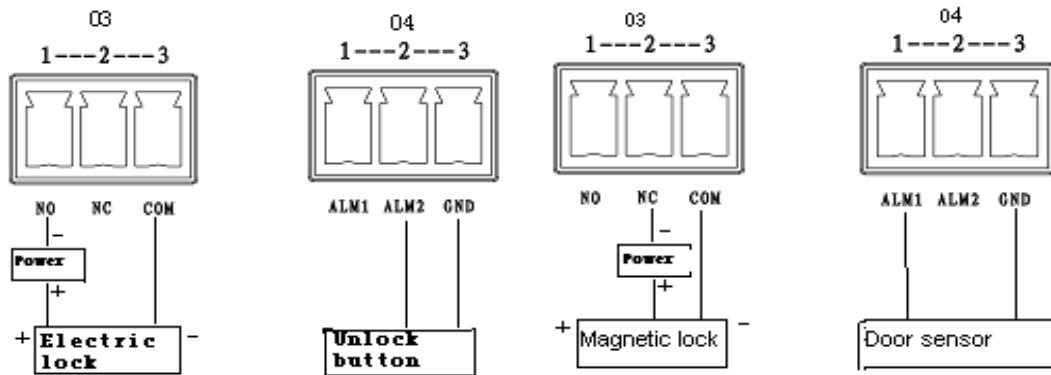

### 5.2 Arming/Disarming Strategy

- Step 1 Under standby status, you may enter main menu by pressing menu.
- Step 2 Repeat pressing menu button, select to set menu item. Press call button to enter setup interface and select alarm zone to set.
- Step 3 Press monitor or unlock button to switch arming type. Press call button again to select alarm zone (check as selected).
- Step 4 Press menu button, select alarm delay. By pressing monitor or unlock button to select alarm delay length. Max alarm delay is 120s.

