Equipment Model	Firmware	Course Version	Date
DH-ASC1204B-S	General_ASC1204B_MCU_V1.103.0000.0.R.201 70527		2017/10/20
ASR1102A(V2)	General_ASR1102A_MCU_V2.003.0000.0.R.201 70421		
ASR1102A-D(V2)	General_ASR1102A- D_MCU_V2.003.0000.0.R.20170421	V1.0	2017/10/30
SmartPSS	V 2.01.0		






Add E-Map Door Configuration

List/View

Event

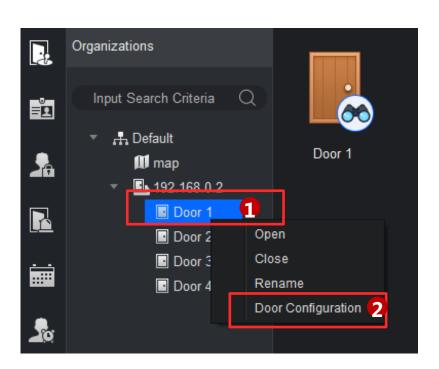


- Right click access control channel
- ② Click 'Door Configuration'



Add E-Map Door Configuration

List/View

Event

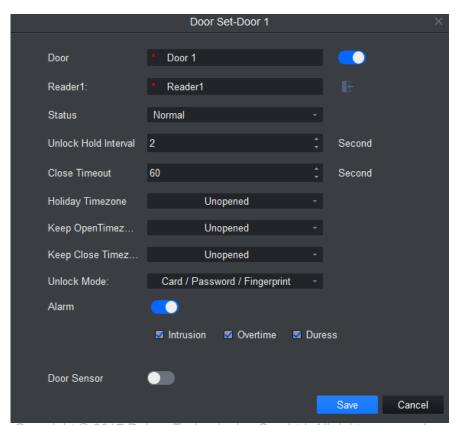


In door configuration interface, you can set door's parameters:

Parameter	Note
Status	Normal, Normal Open(NO) and Normal Close(NC)
Unlock Hold Interval	Unlock hold interval, 1s~600s。
Close Timeout	Door close time out,1s~9999s。
Holiday Time zone	Within access control period, and on holiday,
	execute holiday period with priority. Default is null.
Keep Open Timezone	Within access control period, and NO period, door is
	normal open. Default is null.
Keep Close Timezone	Within access control period, and NC period, door is
	normal close. Default is null.

Copyright © 2017 Dahua Technologies Co., Ltd. All rights reserved.



List/View

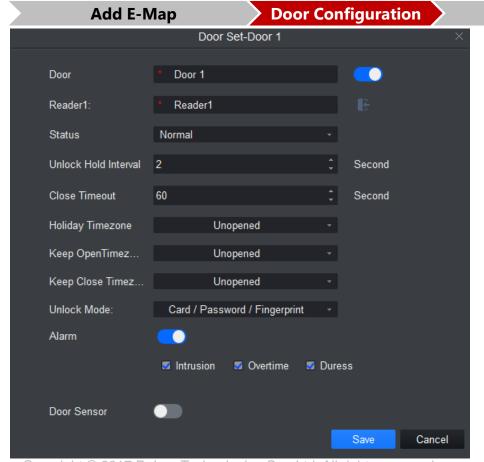

Parameter	Note	
Unlock Mode	You can unlock by card, password, fingerprint,	
	card+password, card+fingerprint, period. When the	
	door is set to multi-card unlock mode, unlock mode	
	become invalid.	
	By period: Monday~Sunday, 4 periods per day,	
	with period can have different mode.	
Alarm	You should enable alarm first if you want to use the	
	related fuctions.	
	 Duress: force to swipe card and alarm. 	
	Intrusion: intruded and alarm.	
	Timeout: door not locked and alarm.	
Door Sensor	Door open/close status is judged by actual status.	

Event

Copyright © 2017 Dahua Technologies Co., Ltd. All rights reserved

THANK YOU