


How to Set Holiday

Equipment Model	Firmware	Course Version	Date
DH-ASC1204B-S	General_ASC1204B_MCU_V1.103.0000.0.R.20170527	V1.0	2017/10/30
ASR1102A(V2)	General_ASR1102A_MCU_V2.003.0000.0.R.20170421		
ASR1102A-D(V2)	General_ASR1102A-D_MCU_V2.003.0000.0.R.20170421		
SmartPSS	V 2.01.0		

Overview

- If a door has been set a holiday time zone, it means during a specific holiday period the door can be unlocked by different method from general period.


Set Holiday Duration

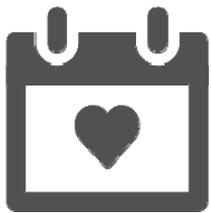


Set Holiday Time Zone



Set Door's Holiday Period

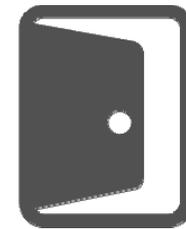

Holiday Setup

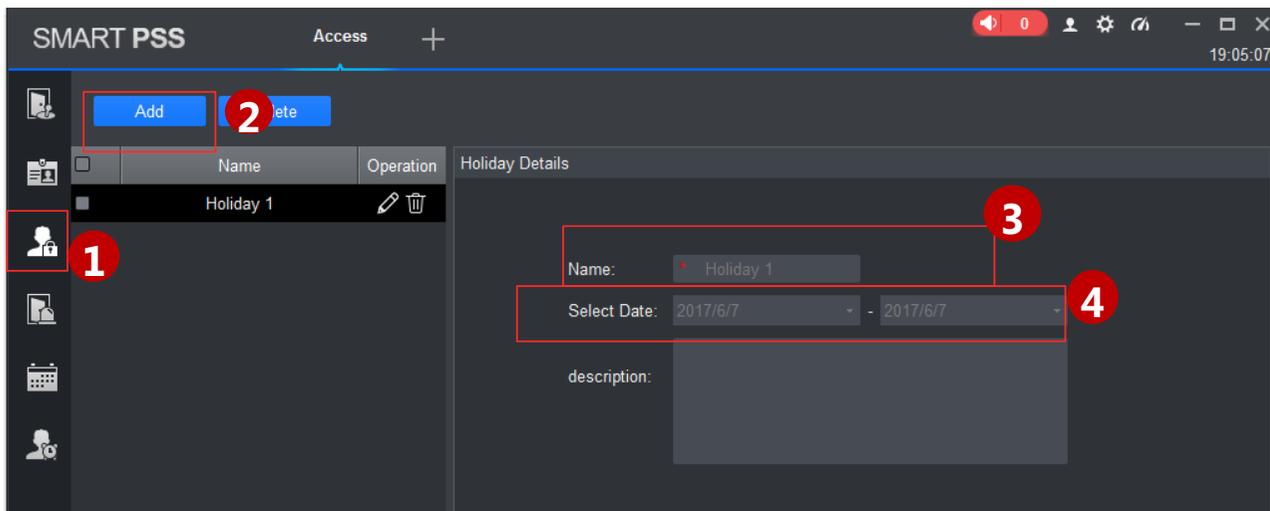


- ① Click , select Holiday Setup.
- ② Click Add, see Figure 17 29.
- ③ Enter name.
- ④ Select Duration.

Note:

Within holiday period, holiday has priority in execution. Holiday period is for access only.

Time Zone Setup

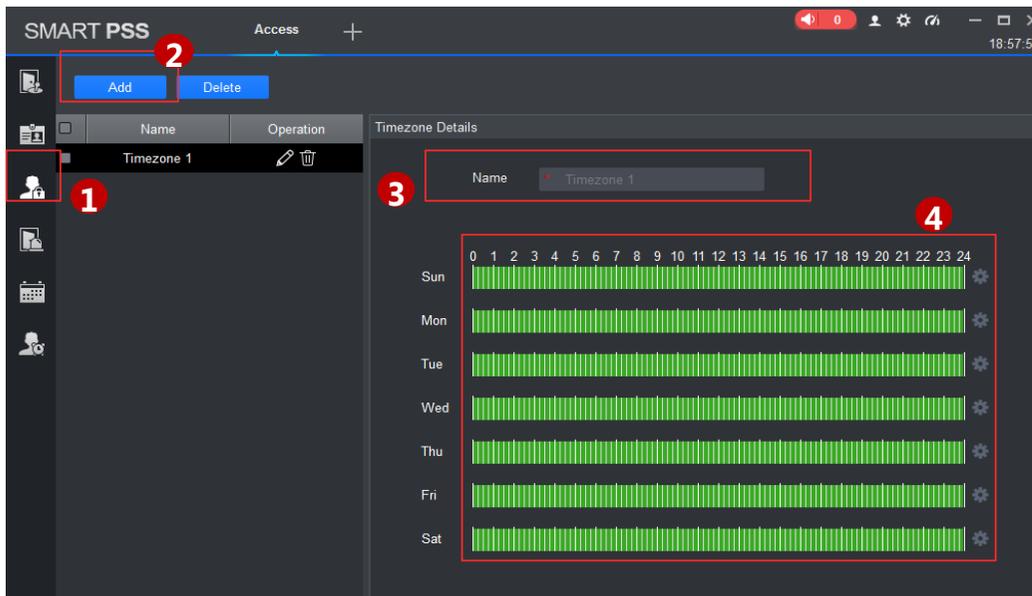


- ① Click , select Time Zone Setup.
- ② Click Add
- ③ Enter period name (This time zone is for holiday only).
- ④ Select daily period for Monday to Sunday.


Note:

A device supports to 128 periods setup with daily limit of 4 periods.

Door's Holiday Period Setup

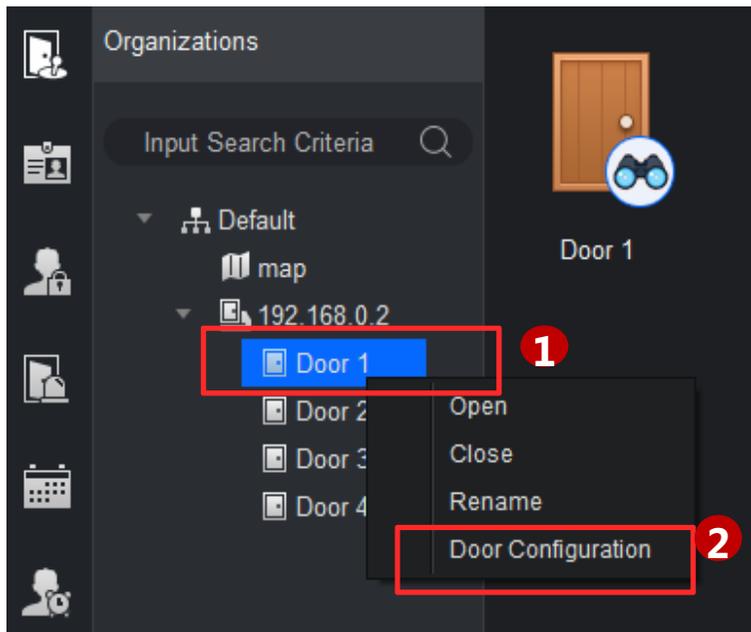

- ① Right click access control channel
- ② Click 'Door Configuration'
- ③ Choose the time zone you set for holiday only.

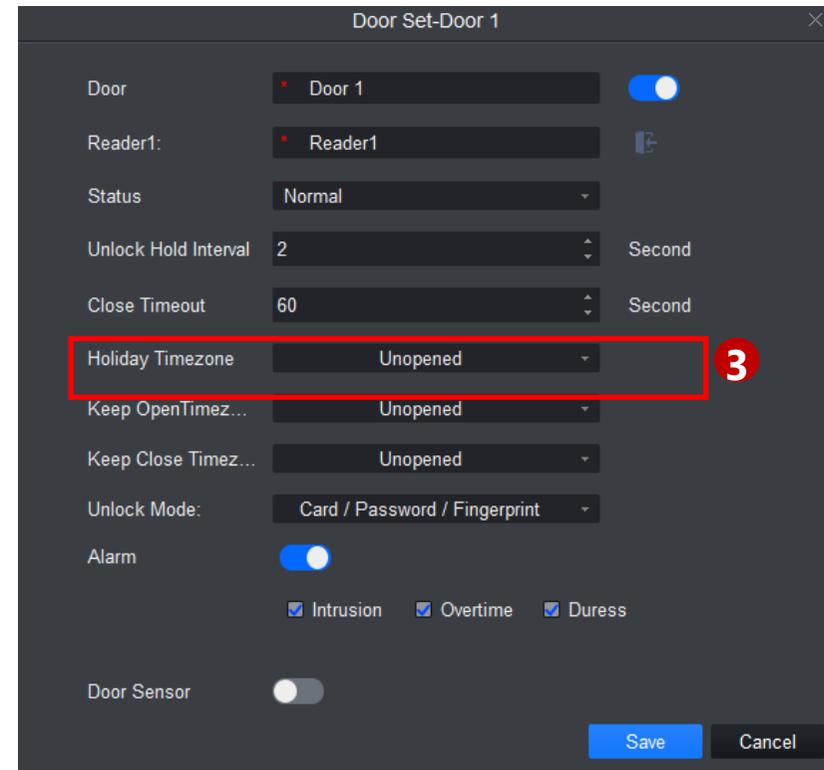

Note: you can set sever holiday periods and one time zone. It means during the holiday, the door can be unlocked in the specific time zone

THANK YOU