## **Out/Break Management in PSS & ASA2212A**

## 1. ASA2212A supports to management Break. There are Break

## In/Break Out Key to register Out behavior

a. In Device, Menu->6 Features->State Switch.

Notice: Press OK to switch state key, Press Del. to delete the default time Value, and input the new time .For example ,in Device ,bewteen7:00-10:00, it will display the Break out on screen. You are supports to switch state key manual press \* on the left bottom.




When you go out, press \*key, select Break out and verify your authority, when you go back, select Break In state key and then verify your authority.



## 2. Smartpss Report, Break Out.

 There is Break Out in reports module. Corporate with device, it could manage employees out or break time. For example, 14:20 Break Out, 15:30 Break in, the report could calculate the Out time is 70 minutes.

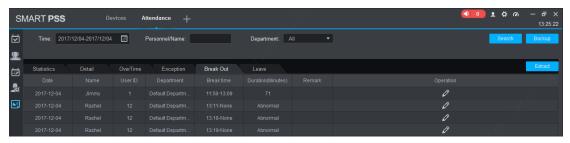

Notice: The Break Status could be modified in Smartpss.